

KENWOOD TK-860 – FRONT PANEL PROGRAMMING

STEP	FUNCTION	ACTION	DISPLAY
1	Program Mode Access	Hold down "A" - Power on.	PrOG, then SEL
2	Open Channel 1	Press "MON" Key	CH 1
3	Change Channel No.	Up D/A Key. Down SCAN Key	Selected channel number
4	Receive Indicate Rx Frequency	Press Channel ∇ Key	Existing Frequency: 4xx.xxx -or- No Frequency: - - - - -
5	To delete frequency or to add frequency	Toggle Channel Δ Key	Base of 460.00000 or current 4xx.xxx or no frequency
6	Change MHz	Vol Δ or Vol ∇ Key	New MHz Frequency
7	Change KHz	Up D/A Key. Down SCAN Key	New KHz Frequency
8	Indicate Rx Tone	Press Channel ∇ Key	Existing Tone
6	Change Tone Code Option	Toggle Channel Δ Key	Choice of PL or DPL or OFF (for PL, leave at 67)
9	Change Tone Frequency	Up D/A Key. Down SCAN Key	New Tone Frequency
10	Transmit Indicate Tx Frequency	Press Channel ∇ Key	Exist Frequency: 4xx.xxx -or- No Frequency: - - - - -
11	To delete frequency or to add frequency	Toggle Channel Δ Key	Base of 460.00000 or current 4xx.xxx or no frequency
12	Change MHz	Vol Δ or Vol ∇ Key	New MHz Frequency
13	Change KHz	Up D/A Key. Down SCAN Key	New KHz Frequency
14	Indicate Tx Tone	Press Channel ∇ Key	Existing Tone
15	Change Tone Code Option	Toggle Channel Δ Key	Choice of PL or DPL or OFF (for PL, leave at 67)
16	Change Tone Frequency	Up D/A Key. Down SCAN Key	New Tone Frequency
17	General Options 1-4	Press Channel ∇ Key	
18	Add or Delete channels to SCAN function	Toggle D/A Key (also works in Operating mode)	1-ADD – or - 1-DELETE, then Press Channel ∇ Key
19	Busy Channel Lock Out	Toggle D/A Key	2-OFF --or-- 2-ON, then Press Channel ∇ Key
20	High or Low Power	Toggle D/A Key	3-H -- or --3-L, then Press Channel ∇ Key
21	Wide or Narrow Band	Toggle D/A Key	4-UU -- or -- 4- n
22	Go to Next Channel	Press Channel ∇ Key	New Channel Number

Note: Before front panel programming can be applied, *Dealer/Tuning Mode* must be activated with PC software. Also, a zero ohm jumper must be added in position R492 on the control board (behind front panel).