



Operating instructions: Run aerial out to full length and connect it. Plug in B batteries and check voltages with meter switch (most models require microphone switch to be depressed for battery meter to register, depress only briefly before transmitter is tuned.) Place Meter Switch on "Trans Tune" and depress microphone button while adjusting red "Trans Tune" knob until meter reading "dips" to "lowest" reading. Correct position is the lowest reading on the "dip." Your radiotelephone is now ready for use. Should the antenna load control be inadvertently altered: To reset correctly, place the "Trans Tune" knob vertical at 12 O'clock, then screw in the "Antenna Load" slot clockwise until slightly snug, then loosen half a turn. The "Antenna Load" is correctly adjusted before shipping, and should not be altered. It is stressed that any adjustment other than the "Trans Tune" will be detrimental to the operation of this set.

UNLESS TESTING BATTERIES, LEAVE SWITCH IN TRANS TUNE POSITION

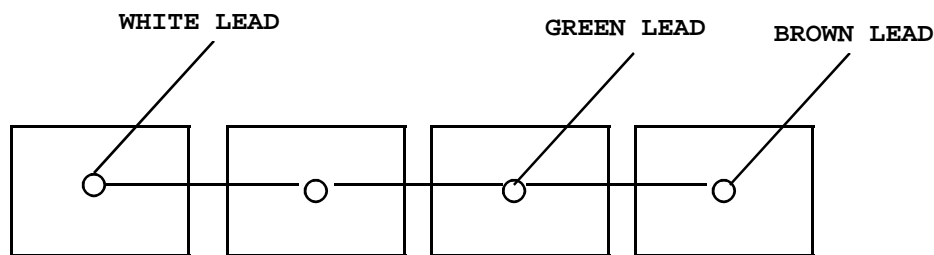

B BATTERIES

To conserve batteries - Once a month switch the Brown and Green lead Receiver plugs with the White Transmitter plugs. A new set of batteries should last for two months when the unit is used about one hour per day.

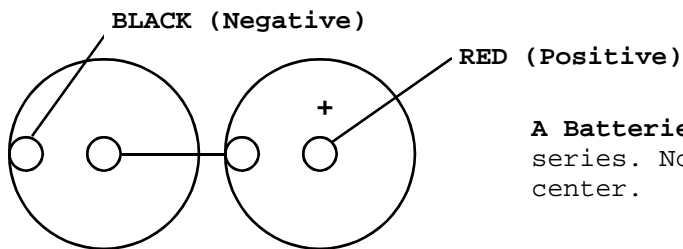

A Batteries: Two # 6 Dry Cells, in series. Note strap from + to - in center.